


Route the main wire harness into the harness guide of the rear fender.



Install the rear fender mounting collar, bolt and nut. Tighten the nuts while holding the bolts.

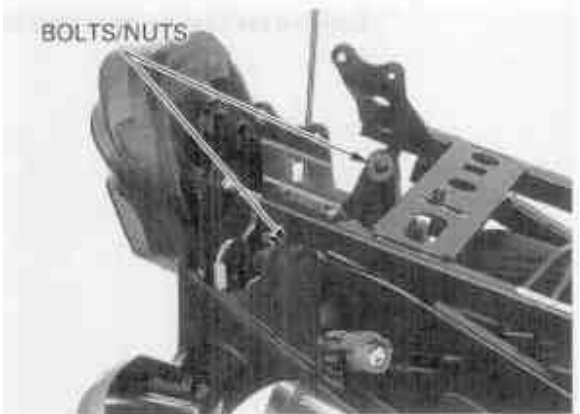

Install the removed parts in the reverse order of removal.

**NOTE:**

Route the wires properly (page 1-24).



## SEAT RAIL

### REMOVAL

Remove the rear fender (page 2-15).

Remove the rear brake hose clamp bolt.  
Remove the PCV (Proportional Control Valve) mounting bolts.

Remove the right pillion footpeg holder mounting bolts.

