


Install the front wheel between the fork legs.

Apply thin coat of grease to the front axle.
Install the front axle.

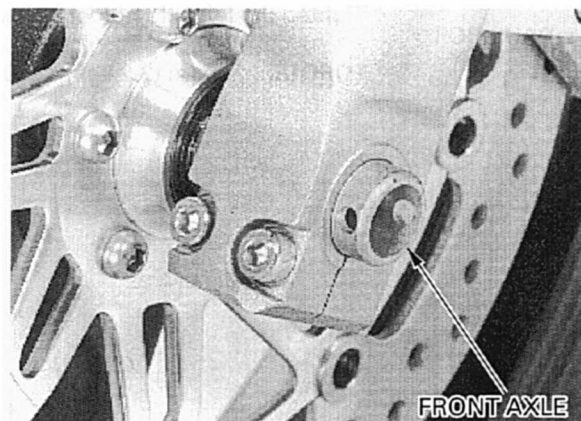


Install the axle bolt and tighten it while holding the axle.

TORQUE: 59 N·m (6.0 kgf·m , 43 lbf-ft)


Tighten the right axle holder bolts.

TORQUE: 22 N·m (2.2 kgf·m , 16 lbf-ft)

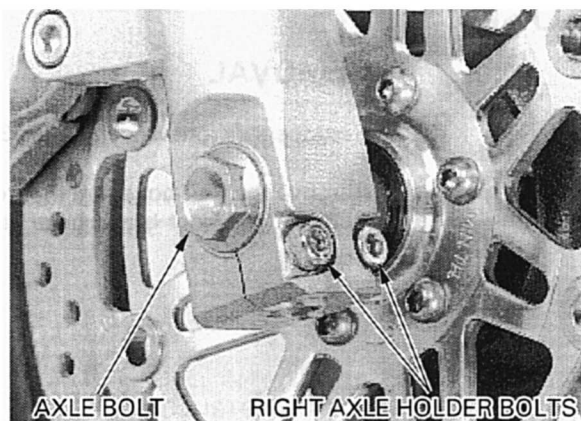

Install the brake calipers with new mounting bolts and tighten the mounting bolts.

TORQUE: 30 N·m (3.1 kgf·m , 22 lbf-ft)

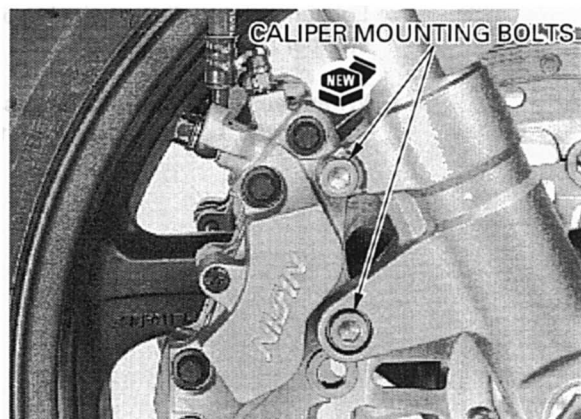

With the front brake applied, pump the forks up and down several times to seat the axle and check brake operation.

