


BRAKE SYSTEM

INSPECTION


This model is equipped with a Dual Combined Brake System. Check the front and rear brake operation as follows:

Place the motorcycle on its center stand and shift the transmission into neutral.


Push the left front brake caliper upward by hand. Make sure the rear wheel does not turn while the left front brake caliper is pushed.

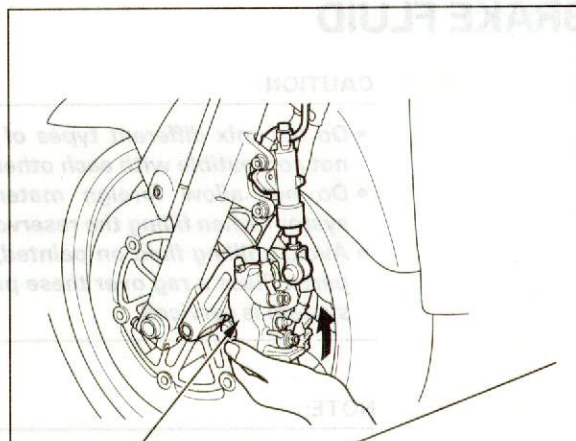

LEFT FRONT BRAKE CALIPER

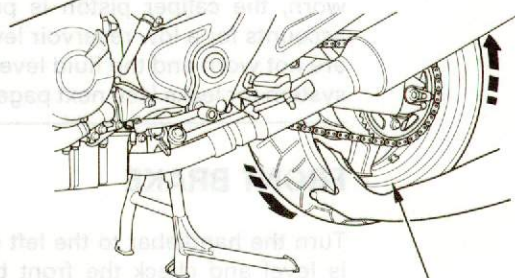

REAR WHEEL

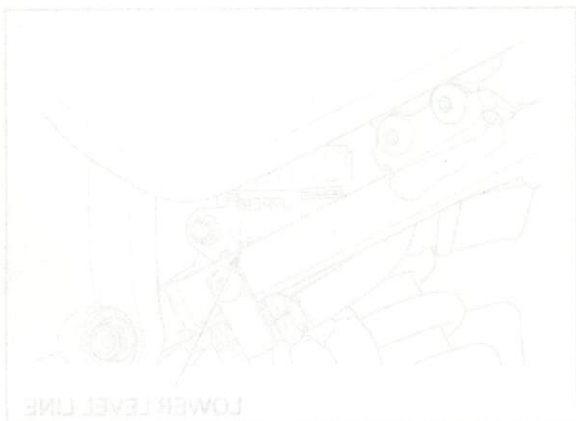


Jack-up the motorcycle to raise the front wheel off the ground.


CAUTION:

Do not use the oil filter as a jack point.

Apply the rear brake pedal. Make sure the front wheel does not turn while the rear brake pedal is applied.

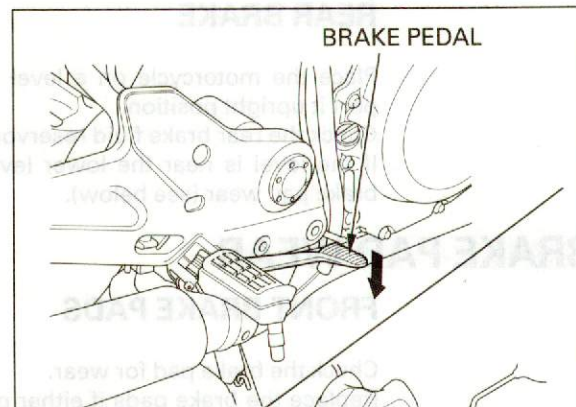

BRAKE PEDAL

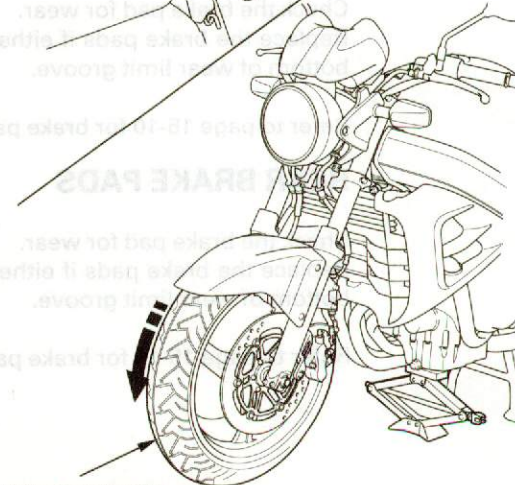

FRONT WHEEL

