



PGM-FI WARNING INDICATOR 23 BLINKS (O<sub>2</sub> SENSOR HEATER)

Connect the O<sub>2</sub> sensor connector.  
Turn the ignition switch ON and warm up the engine up to coolant temperature is 85 °C (185 °F).

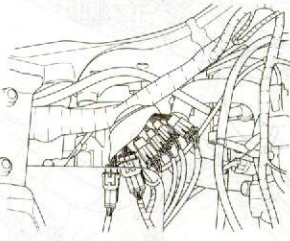

Operate the throttle grip and snap the engine speed from idle to 5,000 min<sup>-1</sup> (rpm).

Check the voltage between the test pin box terminals.

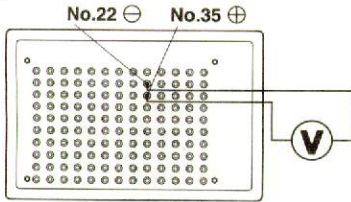

Connection: No.35 (+) – No.22 (-)

Standard:

**With the throttle fully open:**

0.6 V minimum

**With the throttle quickly closed:**

0.4 V minimum

Out of range

• Faulty O<sub>2</sub> sensor

Normal

• Check the fuel supply system, if the system is correct, replace the ECM and inspect again.