

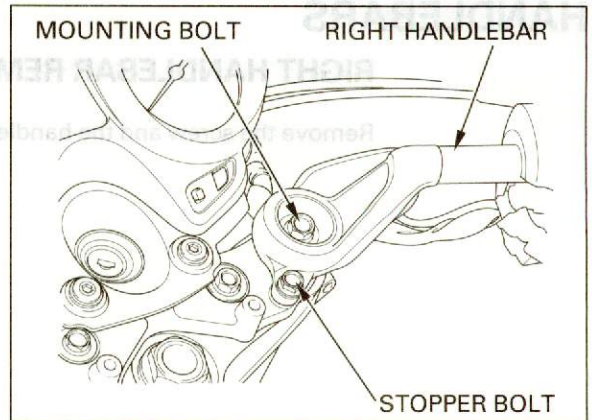
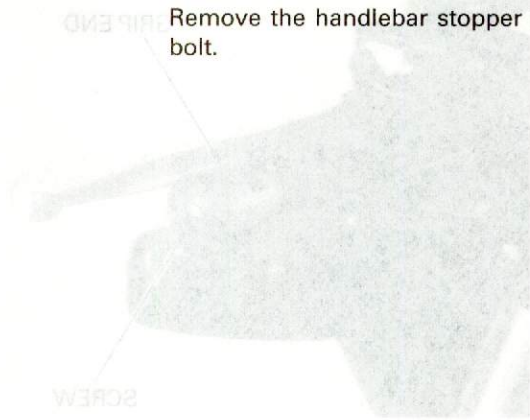


# FRONT WHEEL/SUSPENSION/STEERING



Remove the handlebar stopper bolt and mounting bolt.

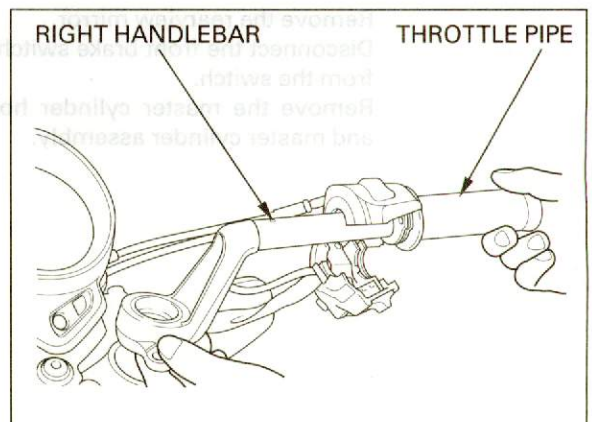

Remove the right handlebar from the right handlebar switch/throttle housing.

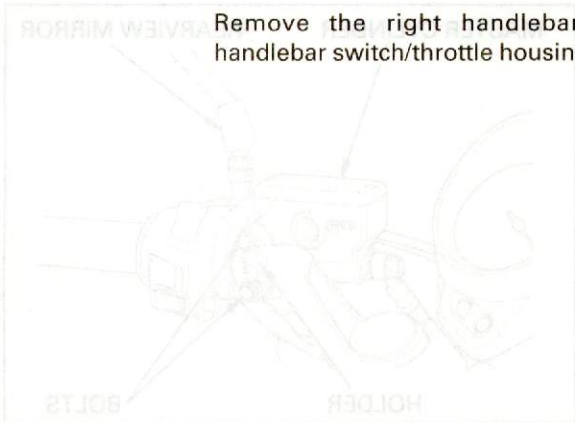

Disconnect the throttle cable ends from the throttle pipe and remove the housing.

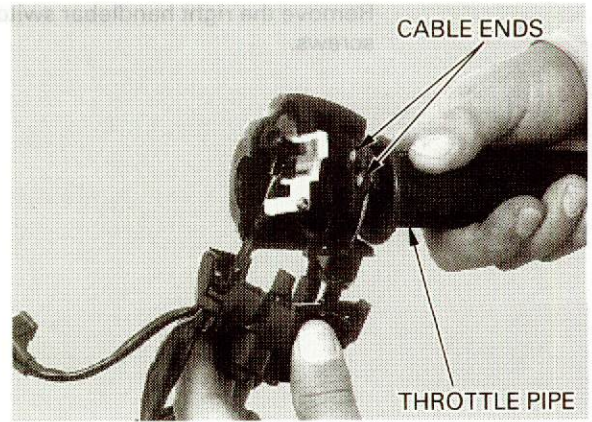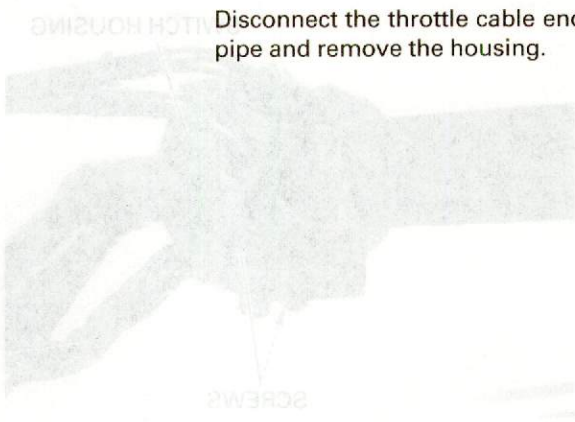

## LEFT HANDLEBAR REMOVAL

Remove the left rearview mirror. Disconnect the clutch switch wire connectors from the switch. Remove the clutch lever bracket holder bolts, holder and clutch lever bracket assembly.

