

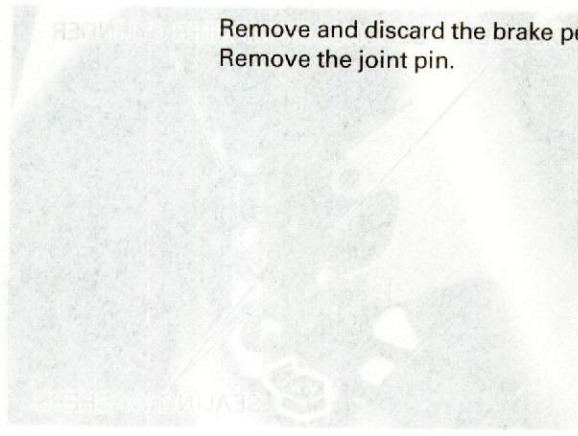




HYDRAULIC BRAKE

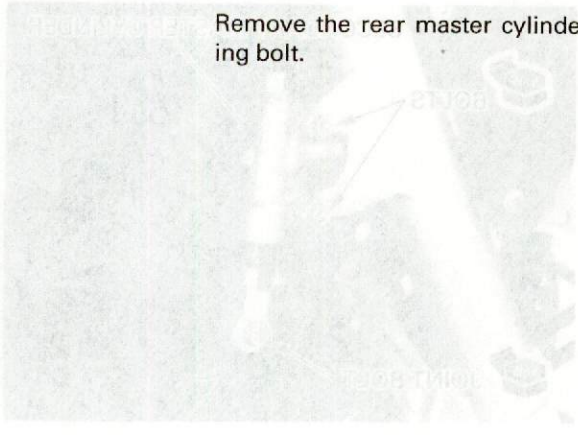

Remove and discard the brake pedal joint cotter pin.
Remove the joint pin.

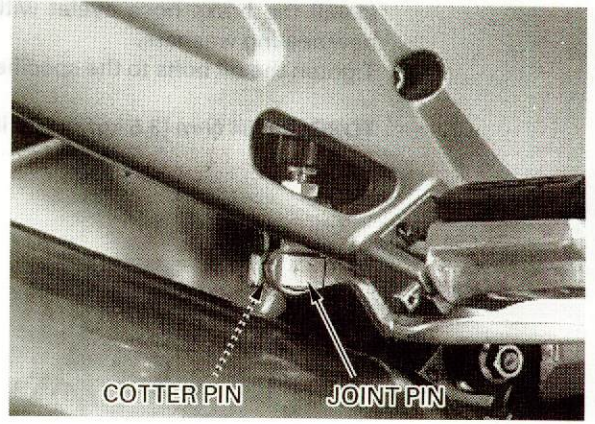


Remove the rear master cylinder reservoir mounting bolt.

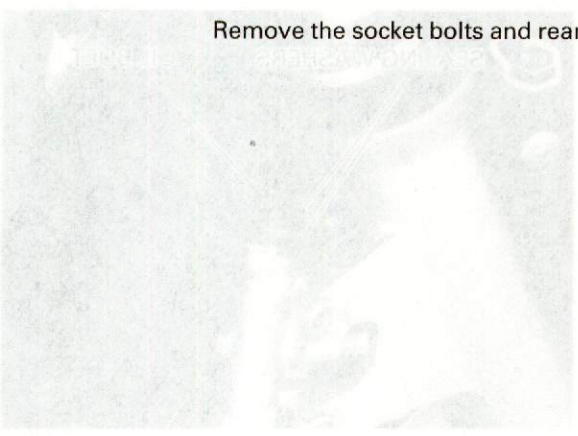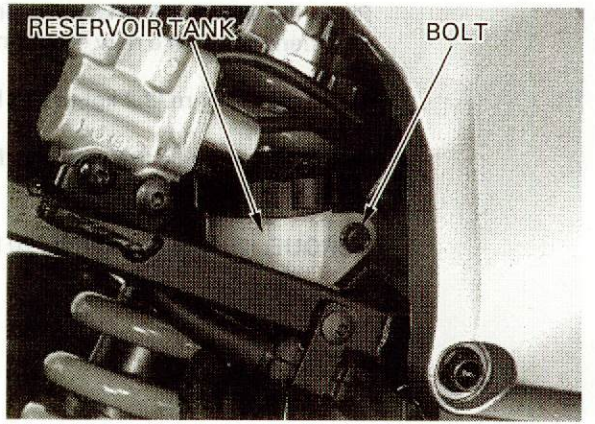

Remove the socket bolts and rear master cylinder.



DISASSEMBLY

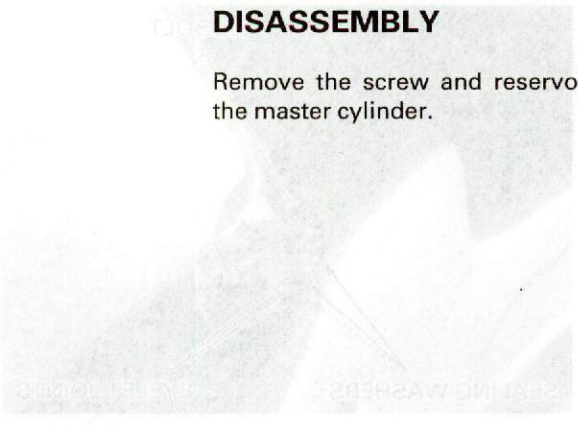

Remove the screw and reservoir hose joint from the master cylinder.

