


REAR SHOCK ABSORBER

REMOVAL

Remove the luggage box (page 3-8).


Slightly lift the rear wheel and remove the lower mounting bolt from the rear shock absorber. Remove the upper mounting bolt and rear shock absorber.

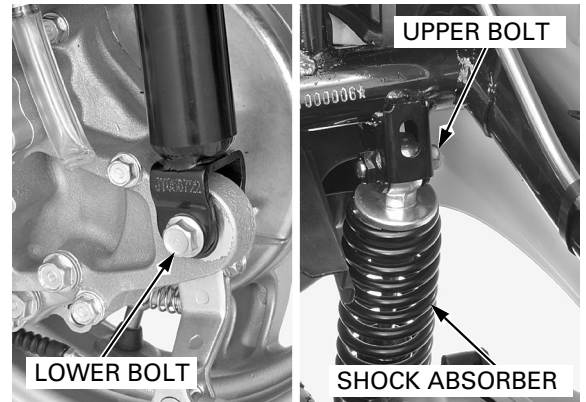

INSPECTION

Check the damper unit for leakage or other damage. Check the shock absorber bushing for wear or damage.

Replace the shock absorber assembly if necessary.

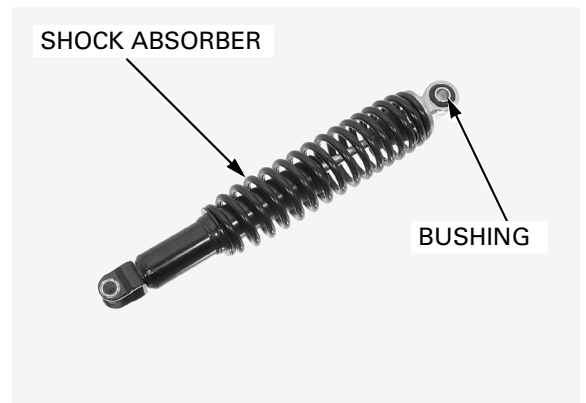

INSTALLATION

Install the rear shock absorber and tighten the upper mounting bolt.

Slightly lift the rear wheel to align the bolt holes and tighten the lower mounting bolt.

Install the luggage box (page 3-8).

