


## LIGHTS/METERS/SWITCHES

### REAR

Remove the front handlebar cover (page 3-6).

Disconnect the rear brake light switch wire connectors and check for continuity at the wire connector terminals of the switch side.

There should be continuity with the rear brake lever squeezed, and there should be no continuity when the rear brake lever is released.

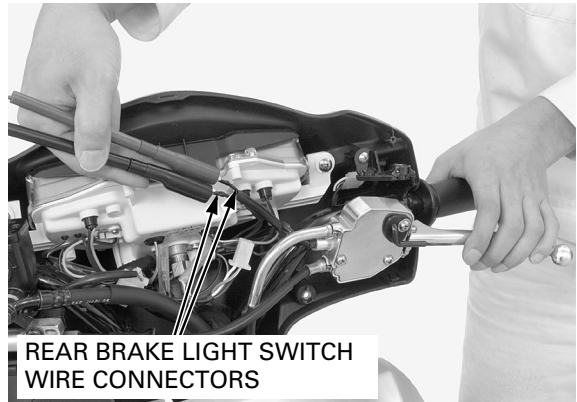


## HORN

### REMOVAL/INSTALLATION

Remove the front center cover (page 3-4).

Disconnect the horn connectors from the horn. Remove the bolt and horn.

Installation is in the reverse order of removal.

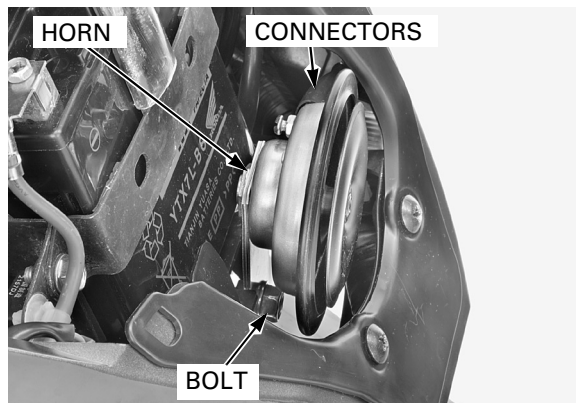

### INSPECTION

Remove the front center cover (page 3-4).

Disconnect the horn connectors from the horn.

Connect a 12V battery to the horn terminals. The horn is normal if it sounds when the 12V battery is connected to the horn terminals.

