


Relieve the fuel hose and remove the quick connect fitting (page 6-32).


Replace the rubber if it is cracked, deteriorated or damaged.

Remove the fuel hose clamp bolt from the cylinder head cover.

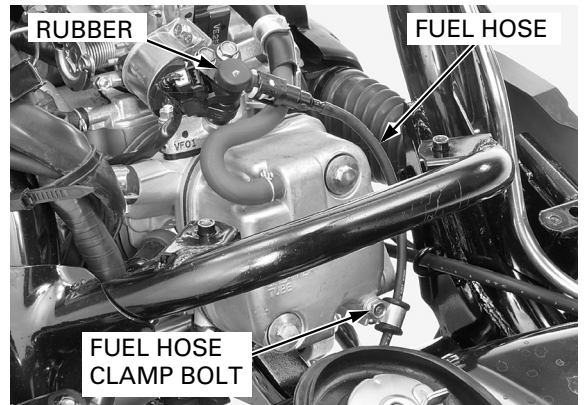


Remove the rear brake adjusting nut and joint pin from the brake cable.

Remove the spring from the brake arm.

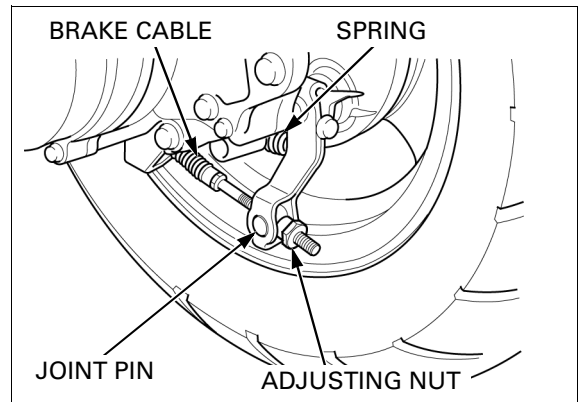

Release the rear brake cable from the cable holder and cable clamps.

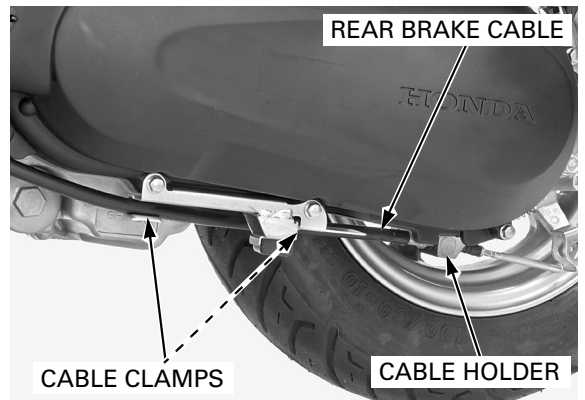

Slightly lift the rear wheel and remove the lower mounting bolt from the rear shock absorber.

